

# Digitrax Throttle Specification Sheet

---

## BT2 Buddy Throttle



Compatibility	All LocoNet Systems
Function Control	F0-F04
Wireless Operation	None
Turnout, Stationary Decoder Control	No
Locomotive Decoder Addresses	9,000
Decoder Programming	No
Screen	None
Throttle Control	Dual Encoders
2 & 4 Digit Addressing	Yes
Recall Feature	No
Transponding Find Feature	No
Flashlight	No
Fast Clock	No
Cab Signaling	No

<b>Prod Date</b>	1995	<b>Discontinued</b>	1999	<b>Replaced By</b>	UT4
<b>MSRP</b>	US\$			<b>SKU</b>	

---

# BT2 Cheat Sheet

## **DT100 or DT200 Dispatch Steps:**

**Select Loco To Dispatch to BT2** Press **(SEL/SET)** Dial up Loco Address

Press **(SEL/SET)** again to Select the Loco

Press **(SEL/SET)** again to Release Loco for Dispatch to BT2.

**Dispatch Loco to BT2** Press **(MODE/DISP)** to Dispatch Loco

**Acquire Loco with BT2** Press **(LOCO/ACQ)** then within 6 seconds

Press either or To Acquire the

Loco on either the Right or Left Throttle

**Clear a loco from a BT2 throttle** Press **(LOCO/ACQ)** (**<-R->**)

Press **(SEL/CLR)** Then within 6 seconds

Press either (**<-R->**) or (**<-L->**)

To clear the Right or Left throttle.

## **Accessing Functions Using BT2**

Press **(Func/F0)**

**Lights** To Toggle Lights On & Off

Press **(FUNC/F0)** Again.

**Toggle Other Functions** Press (**<-L->**) For F3

Press **/+ \** for F1 **Bell**

Press **\-/** For F2 **Whistle** (Non-Latching)

Press (**<-R->**) For F4

**To Exit Function Mode** Wait 6 seconds, Move either Throttle Knob

Or Press **(LOCO/ACQ)** or **(SEL/CLR)**

***Digitrax, Inc. is not responsible for unintentional errors or omissions in this document.***