




LA-2 Instructions

Primary System Booster

Note: Sync & Ground pins are connected on DB100. Be sure to connect these before you power up the booster.

To Power Supply

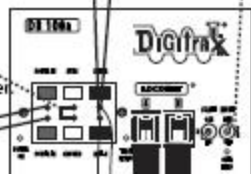

Mode Switch Set to Run for Regular Booster Operation

Local Booster Connection: Expansion Boosters can also be connected directly to the LocoNet Network

Orange
Gray

Primary Booster Connected Via LA-2 to LocoNet

DT200 Command Station Connection Via LA-2 to LocoNet



LA-2 LocoNet Adapter

2mm DC Power Jack

To +12V to +15V DC Power Supply


Recommended System Shut Down Procedure with LA-2

1. Close the Sleep Switch or plug in the Sleep Plug anywhere on LocoNet.
2. Power down the DB100 by pressing RUN/STOP and "-" on the DT200 master unit.
3. Leave all throttles plugged in.
4. Switch off power on the DB100 if desired.


Recommended System Resume Procedure with LA-2

1. Turn on power on DB100 if it was switched off.
2. On the DT200 master unit press RUN/STOP and "+" to power up the DB100.
3. Open the Sleep Switch or remove the Sleep Plug & all other throttles will log back on to the system.

Sleep Switch

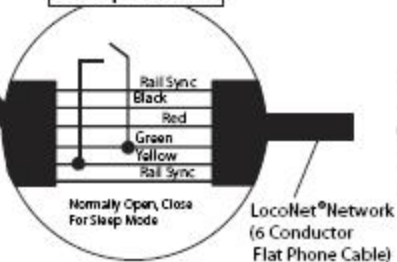

Sleep Plug

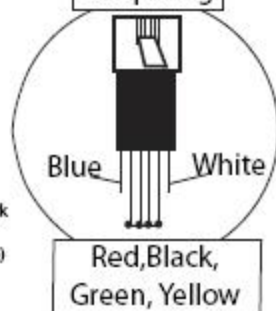

The LA-2 is now being shipped with all Big Boy Sets. It is an improvement over the LA-1. If you are using an LA-1 now you don't need to change to an LA-2 unless you need the master command station keep alive offered by the LA-2. LA-2 is available for \$20.00msrp.