

# Digitrax Detection & Signaling Specification Sheet

---

## BXP88 LocoNet Occupancy Detector, 8 Detection Sections with Transponding and Power Management



Layout Interface	Easy-connect pluggable terminal blocks
External Power	Optional
Firmware Update Capability	Yes, via IPL over LocoNet
Amp Capacity	3 Amps per Detection Section, 8 Amp Total
Transponding Zones	Yes, one per Detection Section
Power Management Zones	Up to 8
Occupancy Detection Zones	8
Detects Powered Locomotives	Yes
Detects Un-Powered Rolling Stock	Yes, (With Installed Resistor Wheel sets)
Support of SuperSonic Decoder Operations	Yes
Outputs for LED's to Indicate Detection	Yes

<b>Prod Date</b>	05/24/2017	<b>Discontinued</b>	Current	<b>Replaced By</b>	Current
<b>MSRP</b>	US\$175.00			<b>SKU</b>	

<b>Option Switch #</b>	<b>Function</b>	<b>Default</b>
<b>OpSw 04</b>	<b>c=slower short circuit detection t=normal short circuit detection</b>	<b>t</b>
<b>OpSw 05</b>	<b>c=transponding enabled t=transponding disabled</b>	<b>c</b>
<b>OpSw 07</b>	<b>c=disable fast find t=enable fast find</b>	<b>t</b>
<b>OpSw 10</b>	<b>c=enable power manager t=disable power manager</b>	<b>c</b>
<b>OpSw 11</b>	<b>c=enable power manager reporting to LocoNet t=disable power manager reporting to LocoNet</b>	<b>c</b>
<b>OpSw 14</b>	<b>c= high detection sensitivity t= regular detection sensitivity</b>	<b>t</b>
<b>OpSw 15</b>	<b>c=do not send occupied message on LocoNet when faulted t=send occupied message on LocoNet when faulted</b>	<b>t</b>
<b>OpSw 33</b>	<b>c= Disable Operations Mode Readback t=enable Operations Mode Readback</b>	<b>t</b>
<b>OpSw 40</b>	<b>c=set factory default</b>	<b>t</b>
<b>OpSw 41</b>	<b>c=disable occupancy reporting for Detection Section 1 t=enable occupancy reporting for Detections Section 1</b>	<b>t</b>
<b>OpSw 42</b>	<b>c=disable occupancy reporting for Detection Section 2 t=enable occupancy reporting for Detections Section 2</b>	<b>t</b>

*Digitrax, Inc. is not responsible for unintentional errors or omissions in this document.*