DSXCP1 Switch control panel

Features:

- Fascia control panel with LEDs for controlling 1 switch of 4 on a DS74.
- Plug and play in conjunction with a DSXC4 connector and DS74.
- May be wired to the DS74's input ribbon cable.

Parts List

- 1 DSXCP1 Switch control panel 1 0.1" 3 pin plug/plug cable

1 Instruction Sheet

CP1 Installation

The DSXCP1 is simple to install, wire or plug in, and begin using to control switches on your DS74.


- For plug and play, connect the DSXCP1 with a 3 pin plug to a DSXC4 con-1. nector PCB that is plugged into a DS74.
- Connect a 3 pin plug to the rear of the DSXCP1 as shown in *Figure 1*. The 2. silver plug pins should not be visible.
- To change the DS74 output direction: press the DSXCP1 switch and the 3. direction LEDS will change to show the new switch direction.
- Figure 2 shows alternate direct soldered wiring to a DS74 10 pin input ca-4. ble. The DS74 White Ground wire goes to the Brown wire on the 3 pin plug of all units, and the Black +5V wire goes to the Red 3 pin harness wires. Each 3 pin Orange wires go to the chosen DS74 SW1-4 input wires.
- Using a terminal block instead of soldering the wires gives a no-solder 5.
- Mount the DCSXCP1 in a 1" fascia hole with your preferred #4 screws. The 6. direction LEDs at bottom make them most visible.

That's all that's required for installation of your CP1!

Figure 1: Plug connection



Figure 2: Solder connect 2 units

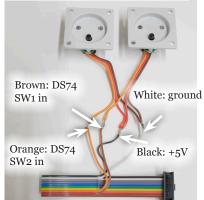

Warranty & Repair

Digitrax gives a 90-day Warranty against manufacturing defects on the DSXCP1.

Visit <u>www.digitrax.com</u> for warranty details and instructions for returning items for repair.

Please return warranty items directly to Digitrax - DO NOT return items to place of purchase.

Digitrax, Inc. is not responsible for unintentional errors or omissions in this document.



Made in the USA

2443 Transmitter Road Panama City, FL 32404 www.digitrax.com

Need Support? helpdesk.digitrax.com

